



TRANSMISSION OIL COOLER

COMPONENTS

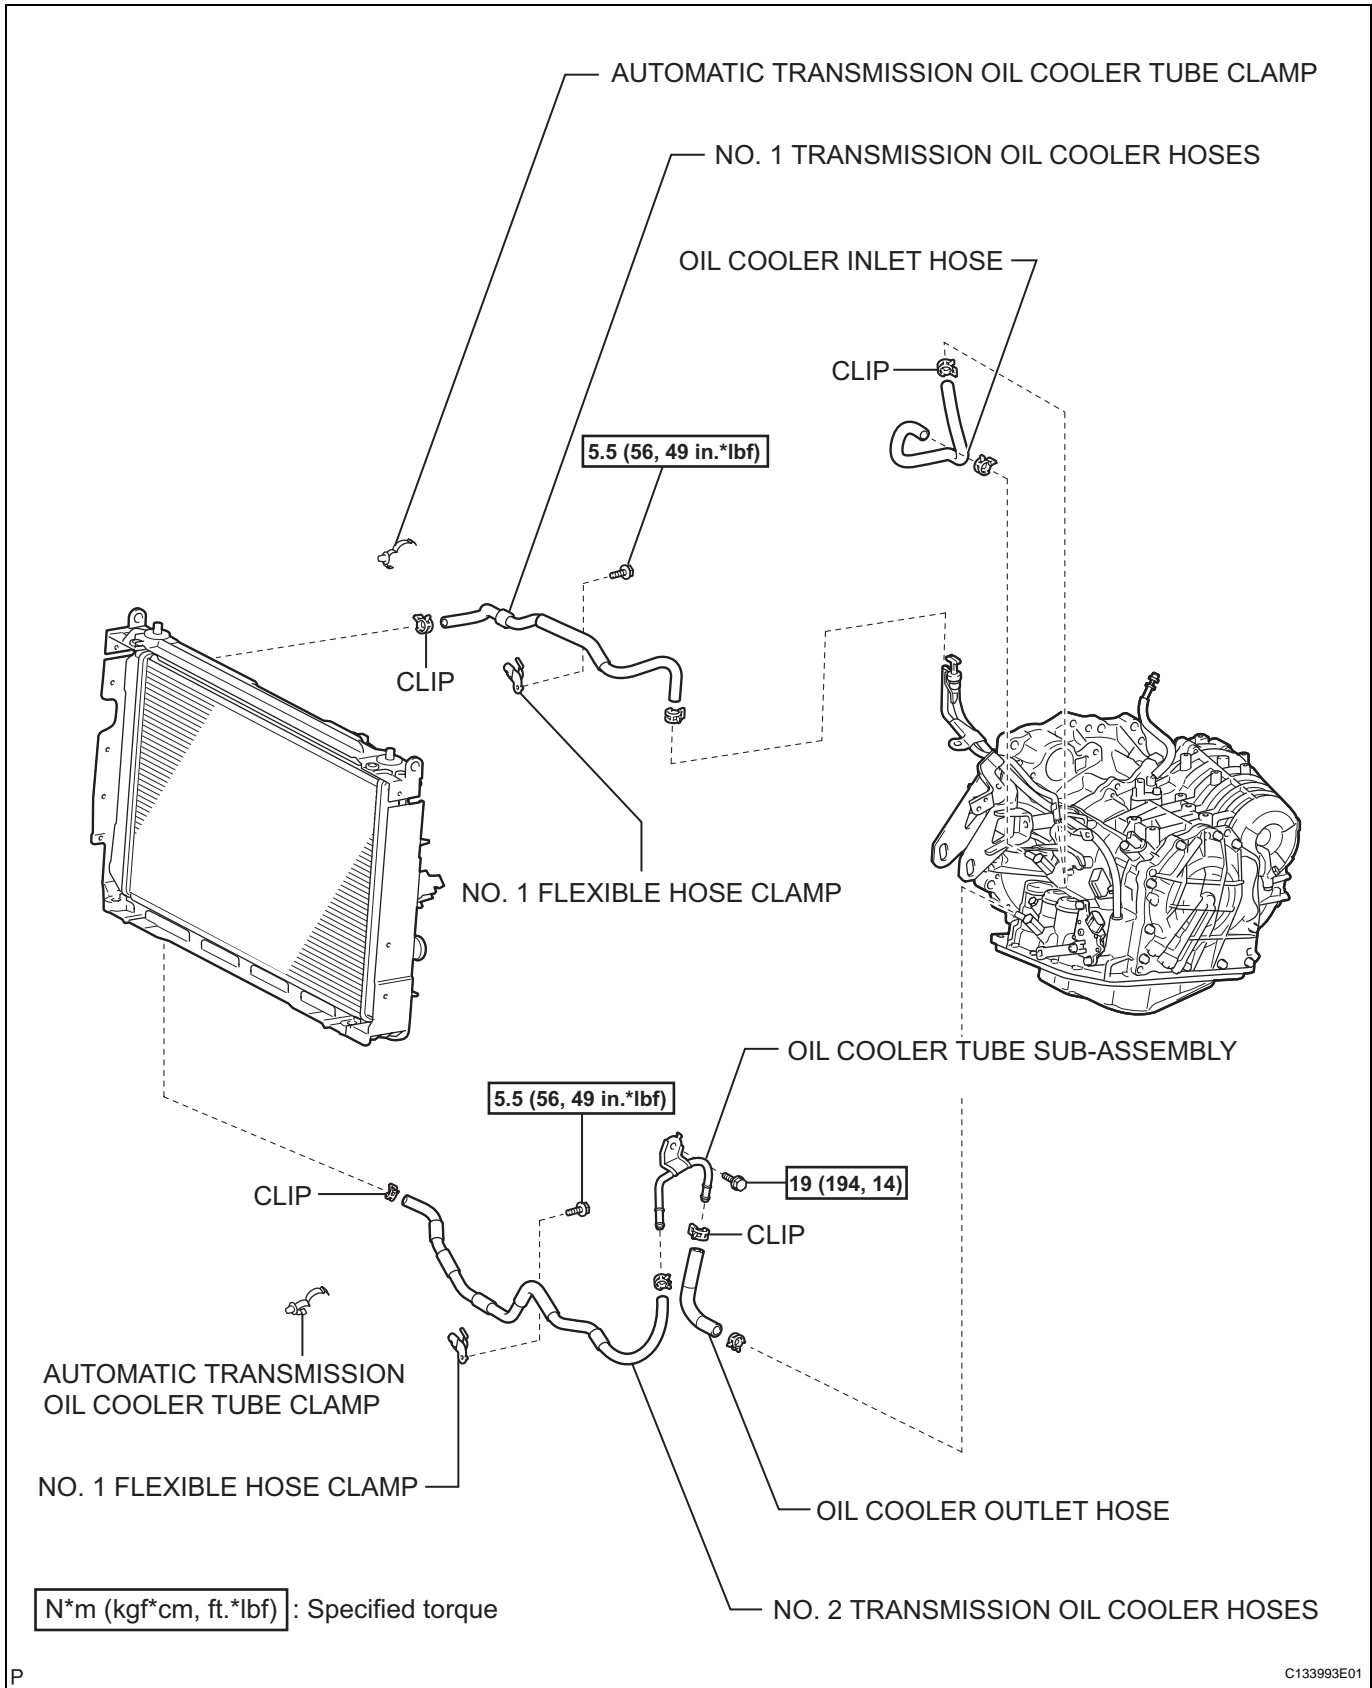

REMOVAL


1. DISCONNECT NO. 1 AND NO. 2 TRANSMISSION OIL COOLER HOSES

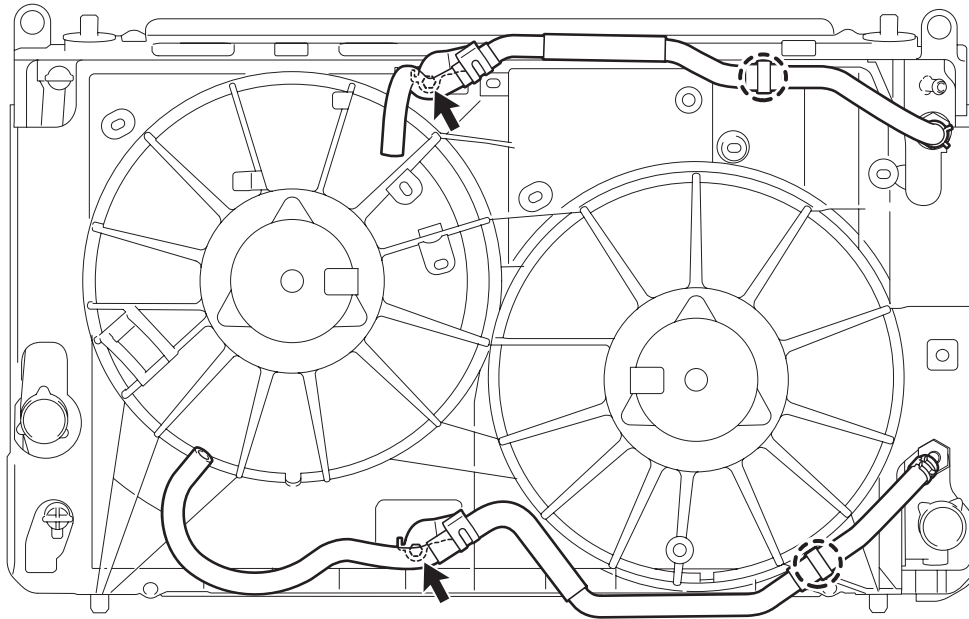

P


C133014

- (a) Disconnect the 2 hoses from the 2 No. 1 flexible hose clamps.
- (b) Detach the 2 claws to open the 2 automatic transmission oil cooler tube clamps.
- (c) Disconnect the 2 hoses from the radiator.
- (d) Remove the 2 bolts and 2 No. 1 flexible hose clamps.
- (e) Remove the 2 automatic transmission oil cooler tube clamps.
- (f) Disconnect the 2 hoses from the transmission oil filler tube and oil cooler tube.

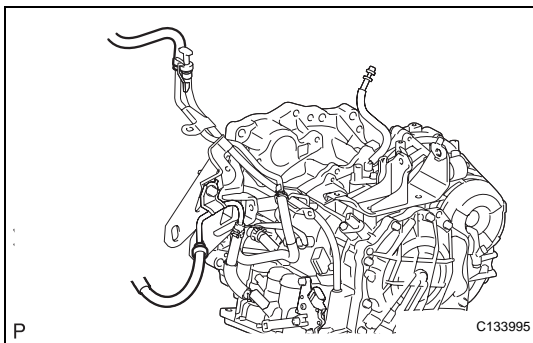

P

C133995

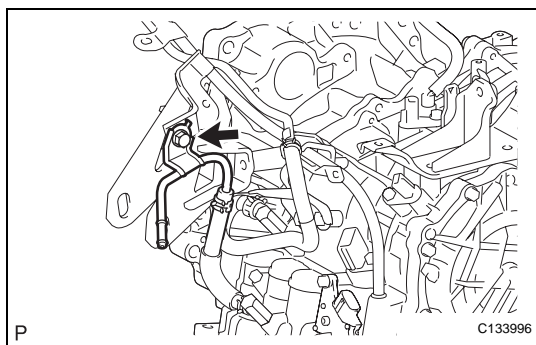


2. DISCONNECT OIL COOLER TUBE SUB-ASSEMBLY

- (a) Disconnect the oil cooler outlet hose from the oil cooler tube and transaxle.
- (b) Remove the bolt and oil cooler tube.

3. DISCONNECT OIL COOLER OUTLET HOSE

- (a) Disconnect the oil cooler outlet hose from the transaxle.

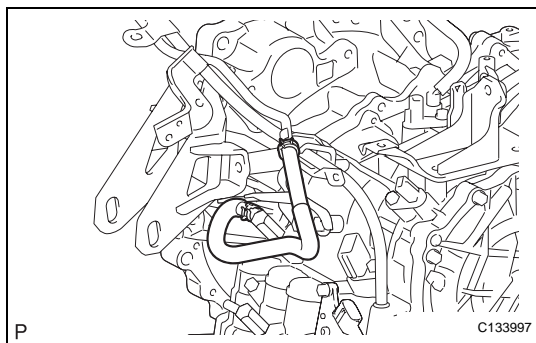


4. DISCONNECT OIL COOLER INLET HOSE

- (a) Disconnect the hose from the transmission oil filler tube and transaxle, and remove it.

INSTALLATION

1. CONNECT OIL COOLER INLET HOSE

- (a) Connect the hose to the transaxle and transmission oil filler tube.

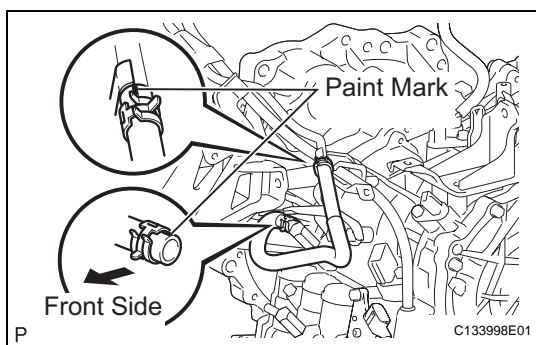


2. INSTALL OIL COOLER TUBE SUB-ASSEMBLY

- (a) Install the tube with the bolt.
Torque: 19 N*m (194 kgf*cm, 14 ft.*lbf)


NOTICE:


Make sure the rotation stopper of the tube contacts the top part of the front engine mounting bracket.

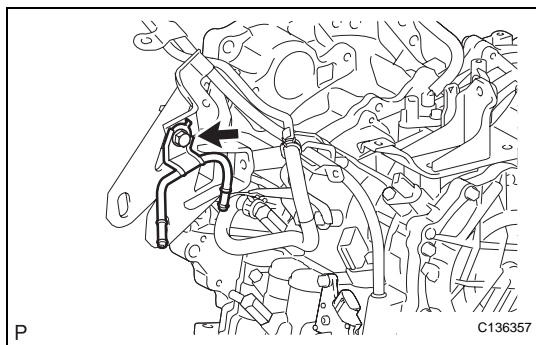

3. CONNECT OIL COOLER OUTLET HOSE


- (a) Connect the hose to the transaxle and oil cooler tube.

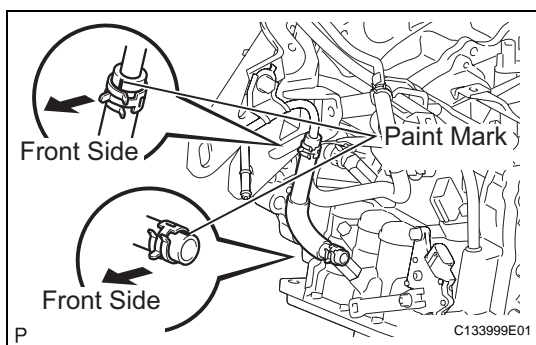

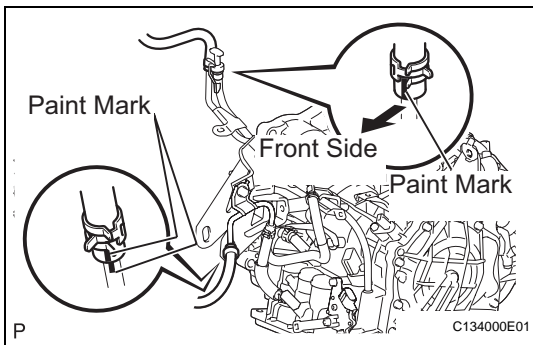

4. CONNECT NO. 1 AND NO. 2 TRANSMISSION OIL COOLER HOSES

- Connect the 2 hoses to the transmission oil filler tube and oil cooler tube.
- Install the 2 automatic transmission oil cooler tube clamps to the radiator.

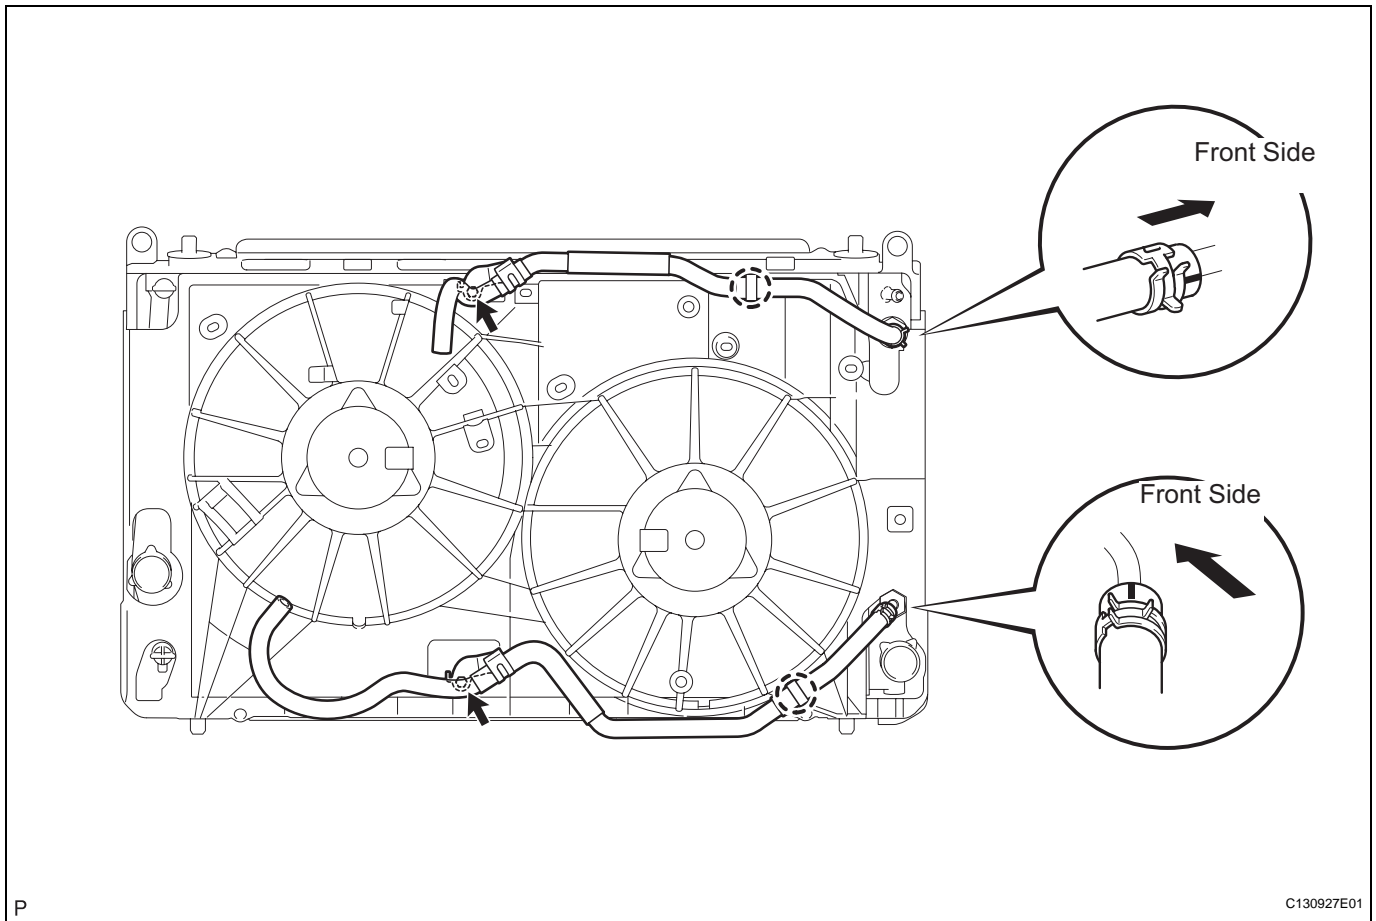

- Install the 2 No. 1 flexible hose clamps to the radiator with the 2 bolts.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
- Connect the 2 hoses to the radiator.
- Pass the 2 hoses through the 2 automatic transmission oil cooler tube clamps.
- Connect the 2 hoses to the 2 No. 1 flexible hose clamps, and close the 2 clamps.

5. ADD AUTOMATIC TRANSAXLE FLUID

6. INSPECT AUTOMATIC TRANSAXLE FLUID

- Inspect the automatic transaxle fluid (see page [AX-126](#)).